



How to Remove Mercury Switches in Hood and Trunk Lights

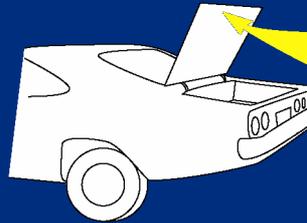


Hood light

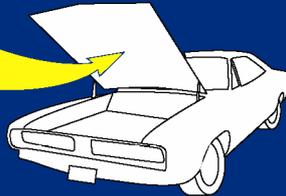

Trunk light

Ford

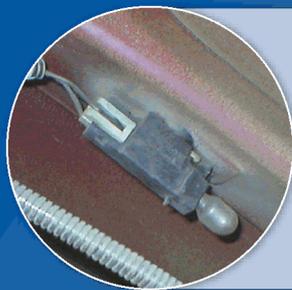

1 Remove the light bulb.



2 Remove the wing clip from the light assembly.



3 Slide the plastic brace off the light assembly.



4 Pry the light assembly apart.



5 Remove the mercury switch.



1 Remove the light bulb.



2 Remove the wing clip from the light assembly.



3 Pry the light assembly apart.



4 Remove the mercury switch.



1 Remove the light bulb.



2 Clip the wire at the base of the light assembly.



3 Push the mercury switch out of the light assembly. The mercury switch will come out through the socket.



DEPARTMENT OF TOXIC
SUBSTANCES CONTROL